

Control Channel

Normal

1. Pan - Coarse
2. Pan – Fine
3. Tilt – Coarse
4. Tilt – Fine
5. Colour (fixed)
6. Red
7. Green
8. Blue
9. Shutter
10. Dimmer
11. Colour Temperature
12. Special
13. Movement
14. Speed Pan/Tilt

Compress

1. Pan – Coarse
2. Pan – Fine
3. Tilt – Coarse
4. Tilt – Fine
5. Colour (fixed)
6. Red
7. Green
8. Blue
9. Shutter
10. Dimmer