

Mode 1 - 12 Channel 8-Bit

Pan/Tilt

1. Strobe
2. Intensity
3. Colour 1
4. Colour 2
5. Gobo 1
6. Gobo1 rotate
7. Gobo 2
8. Focus
9. Iris
10. Prism
11. Pan
12. Tilt

Mode 2 - 14 Channel 16-Bit

Pan/Tilt

1. Strobe
2. Intensity
3. Colour 1
4. Colour 2
5. Gobo 1
6. Gobo 1 Rotate
7. Gobo 2
8. Focus
9. Iris
10. Prism
11. Pan
12. Fine Pan
13. Tilt
14. Fine Tilt

Mode 3 - 14 Channel 8-Bit

Pan/Tilt

1. Strobe
2. Intensity
3. Colour 1
4. Colour 2
5. Gobo 1
6. Gobo 1 Rotate
7. Gobo 2
8. Focus
9. Iris
10. Prism
11. Pan
12. Tilt
13. Pan/Tilt Speed
14. Control/Macro

Mode 4 - 16 Channel 16-Bit

Pan Tilt

1. Strobe
2. Intensity
3. Colour 1
4. Colour 2
5. Gobo 1
6. Gobo 1 Rotate
7. Gobo 2
8. Focus
9. Iris
10. Prism
11. Pan
12. Fine Pan
13. Tilt
14. Fine Tilt
15. Speed
16. Control/Macro